




LED Tri-proof Linear Light 3CCT ECO

Features and benefits

- ZOLU Lighting quality and reliability
- Easy install with Quick connector design
- High efficiency: up to 130lm/W
- Flicker free
- Excellent light distribution and uniformity
- Protection class IEC: Safety Class II
- 1KV Surge protection
- Up to 50,000Hrs @ L70 Lifespan
- Operation temperature: -20° to 45°C (Non-corrosive environments)
- Suitable for semi-outdoor and indoor whether have damp room areas


Applications

- Car parking, factories, warehouse
- Tunnels, terraces



Technical specifications

Product code	Power	Light output	Size	Dimensions
ZL36W12LLECO-3CCT	36W	4680lm Max.	4ft	1158x54.2x54.2mm

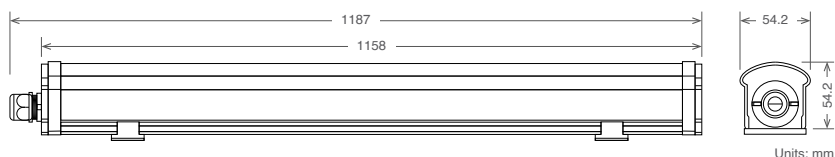

Main voltage	AC120-277V 50/60Hz
Power factor	0.9
Efficiency	130lm/W Max.
SDCM	<6
CRI	Ra80
Protection	IP66 and IK08 Rated
Housing	Polycarbonate
Beam spread	120°
3CCT	3000K / 4000K / 5000K Selectable
Certificates	CE / RoHS
Lifespan	50,000 hrs
Warranty	3 Year



LED Tri-proof Linear Light 3CCT ECO Installation

WARNING

1. Use a qualified electrician for installation of this lighting fixture.
2. This product must be installed by a licensed electrical contractor strictly in accordance with local wiring rules.
3. Avoid touching the LEDs.
4. Please contact qualified service personnel to perform the installation to avoid the possibility of injury or product failure.
5. The product is class II luminaire. For use in environments where an accumulation of conductive dust on the luminaire may be expected.
6. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.





CAUTION:

- This product is designed for indoor & semi-outdoor use. It can be installed in wet areas or where the location is exposed to the elements
- Do not touch the luminaire body when the product is in use or within 10 minutes of removing power.
- Do not install the product near heat sources.
- After the installation is completed, the installation is correct, the power can be switched on. If there is malfunction or questions in relation to the product operation, turn off the power immediately.
- Only to be installed outside arms reach.
- The installation shall be carried out by an electrician or electrically skilled person such that the basic insulated fixed wiring has to be prepared with supplementary insulation before the luminaire can be connected. When the input wire is connected into the terminal of power supply, the connection must be double insulation.

Installation instructions

1 Use a hand drill to drill holes in the installation position. Tap in the expansion tube.	2 Screw the clip on the ceiling tightly.	3 Snap the lamp into clips. The mechanical installation is done.
4 Rotate the side end cover and pull out the circular side cover.	5 Pull out the slide. Route the external power cable through the circular end cover and connect the core cable to the corresponding jack	6 Push the slipper with the terminal into, put the circular side cover into the corresponding position, and rotate the lock. Tighten the outer waterproof nut

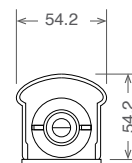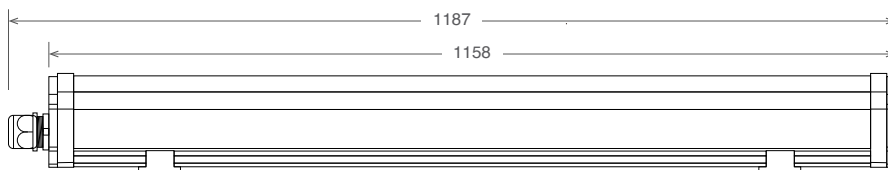

Units: mm

ROHS
COMPLIANT

